 



PTC-PRJJ Connection installation

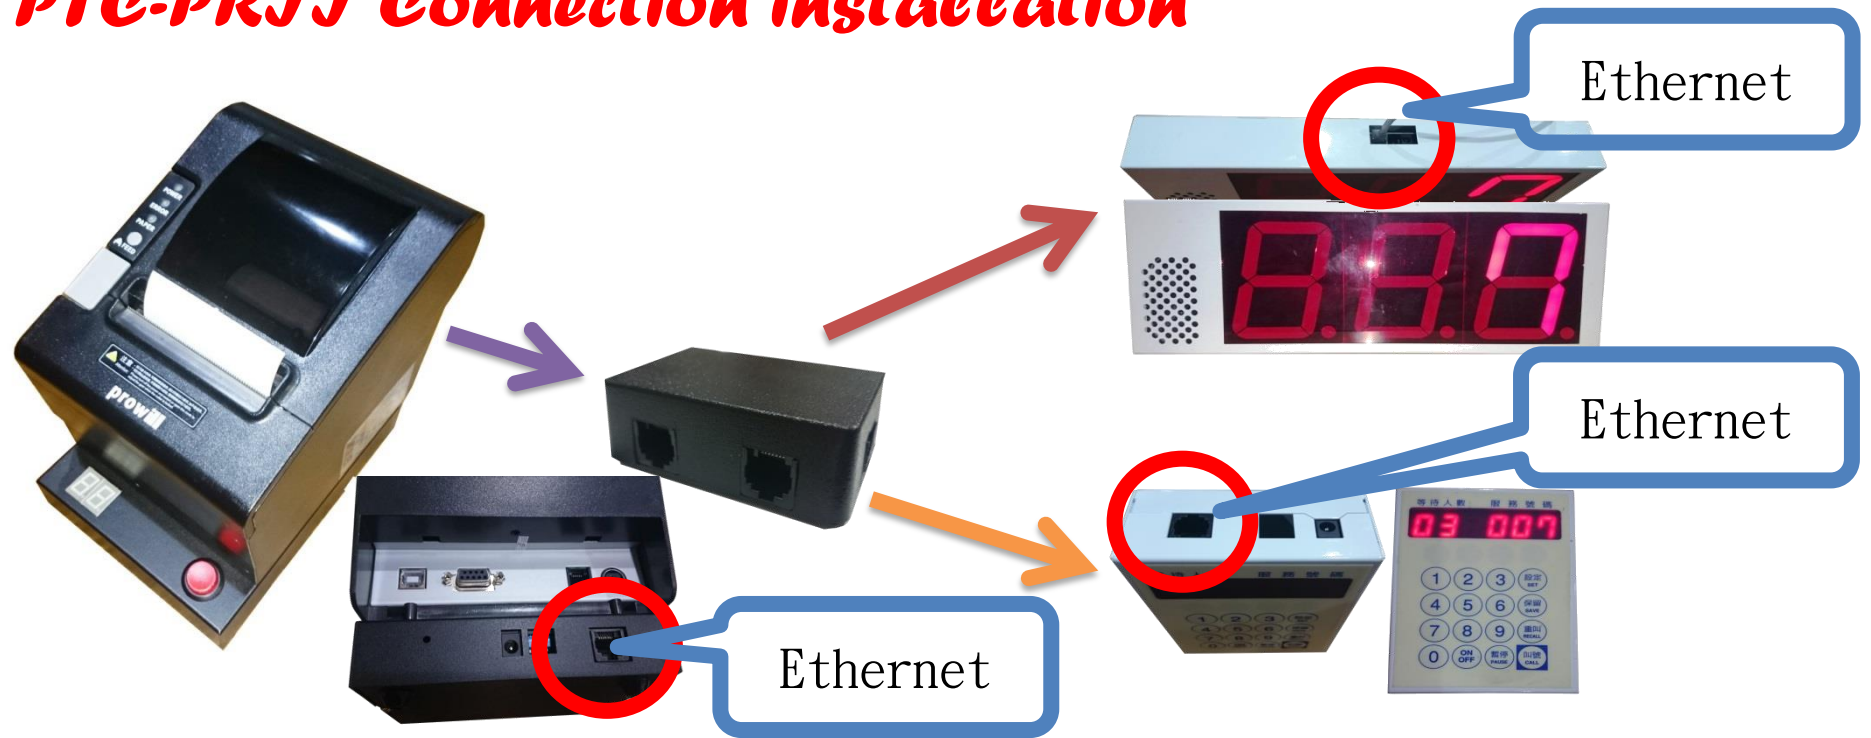

1、Please use 1-to-1 Ethernet cable.


2、One end cable connects to printer ethernet port of lower layer, and the other end connects to the hub. Then the hub connects to display and keyboard.

 PTC-PRJJ Installation

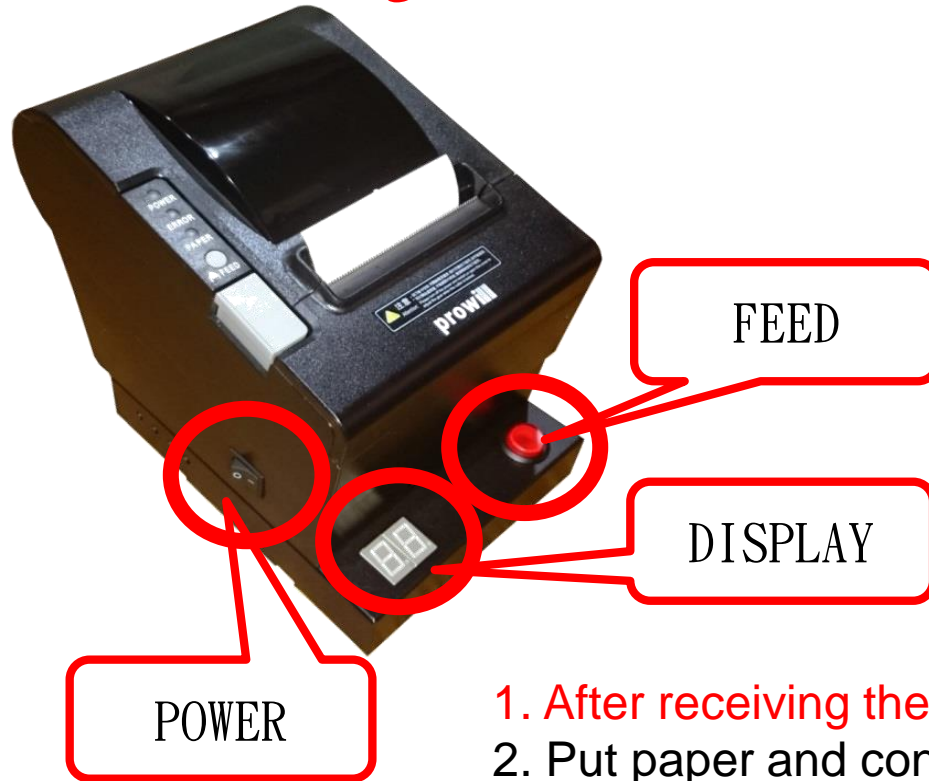

1. After receiving the printer, please take the plastic slice.
2. Put paper and connect printer power. (Lack of paper or cover not close properly, the printer will beep.)
3. Turn on the printer. The printer display, customer display, and keyboard display work after two seconds. After all the display shows 000, start to press feed to take tickets.
4. If you want to restart the machine, please turn it off and wait for 10 seconds before turning it on.

PTC-PRJJ Setting

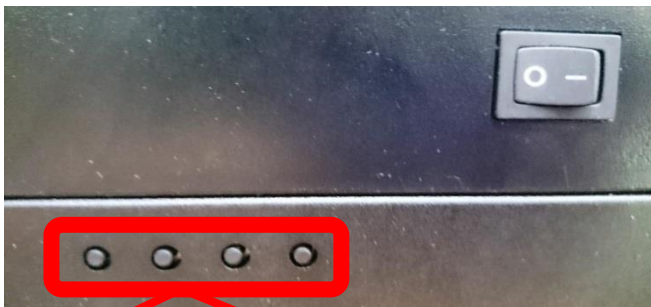

Set Up Down Enter

8 Functions

- 00 : Remain item
- 01 : Year 00~99
- 02 : Month 01~12
- 03 : Date 01~31
- 04 : Hour 00~23
- 05 : Minute 00~59
- 06 : Second 00~59
- 08 : Counter nubmer
- 09: Return to zero

Setting procedures

1	Press "set" button to enter setting mode.(The printer display doesn't work not.)
2	Press "set" button again, printer display will show "00"
3	Press "set" button to choose "00" to "09" function.
4	Press "up" or "down" to set up the value.
5	Press "enter" to choose the valus, and display shows " _ ". The value has been kept in the memory.
6	Display turns back to original.

PTC-OP2



CALL	Press CALL to call the people who took the ticket.
RECALL	Recall the same number.
Call the passed number	Press number 001-999 and press CALL
ON OFF	Turn on / off the power
SET	This button is for software edition. Please do not press it, or the keyboard will be restarted.
NUMBER	Numbers 000-999